


[illegible]

Blatt / Stromweg Page / Circuit Feuilles / Circuits Pagina / Circuito		BLATTUEBERSICHT	PAGES LIST	VUE D'ENSEMBLE	INDICE
X0691-	1A	Blattuebersicht	Pages list	Catalog	Indice
X0691-	1B	Baugruppen und Platinenuebersicht	Assembly groups and boards	Vue d'ensemble blocs et cartes	Unidades de montaje y circuitos
X0691-	2	Prinzip des Generators	Generator principle	Principe generateur	Principio de generador
X0691-	3	Netzanschluss, Spannungversorgung	Mains connection, power supply	Connexion secteur, alimentation	Conexionado general
X0691-	4	kondensatorbank	Condensator bank	Bank de condensateur	Banco de condensadores
X0691-	5	Wechselrichter	Inverter	Convertiseur	Ondulador
X0691-	6	Eintank	Single-tank	Monocuve	Monobloque
X0691-	7	KV regelungsprinzip	KV regulation principle	Reglage KV	Principio de regulacion KV
X0691-	8	Heizkreis	Filament circuit	Circuit de chauffage	Circuito de filamento
X0691-	9	Anlassgeraet	Starter	Demarreur	Arranque
X0691-	10	Aufnahmevorbereitung Kreis	Radiographic circuit	Circuit radiographie	Circuito radiografico
X0691-	100	Kompatibilitaets- listen	Compatibility list	Liste compatibilite	Lista compatibilidad


POLYMOBIL PLUS

18 18 231 X069I


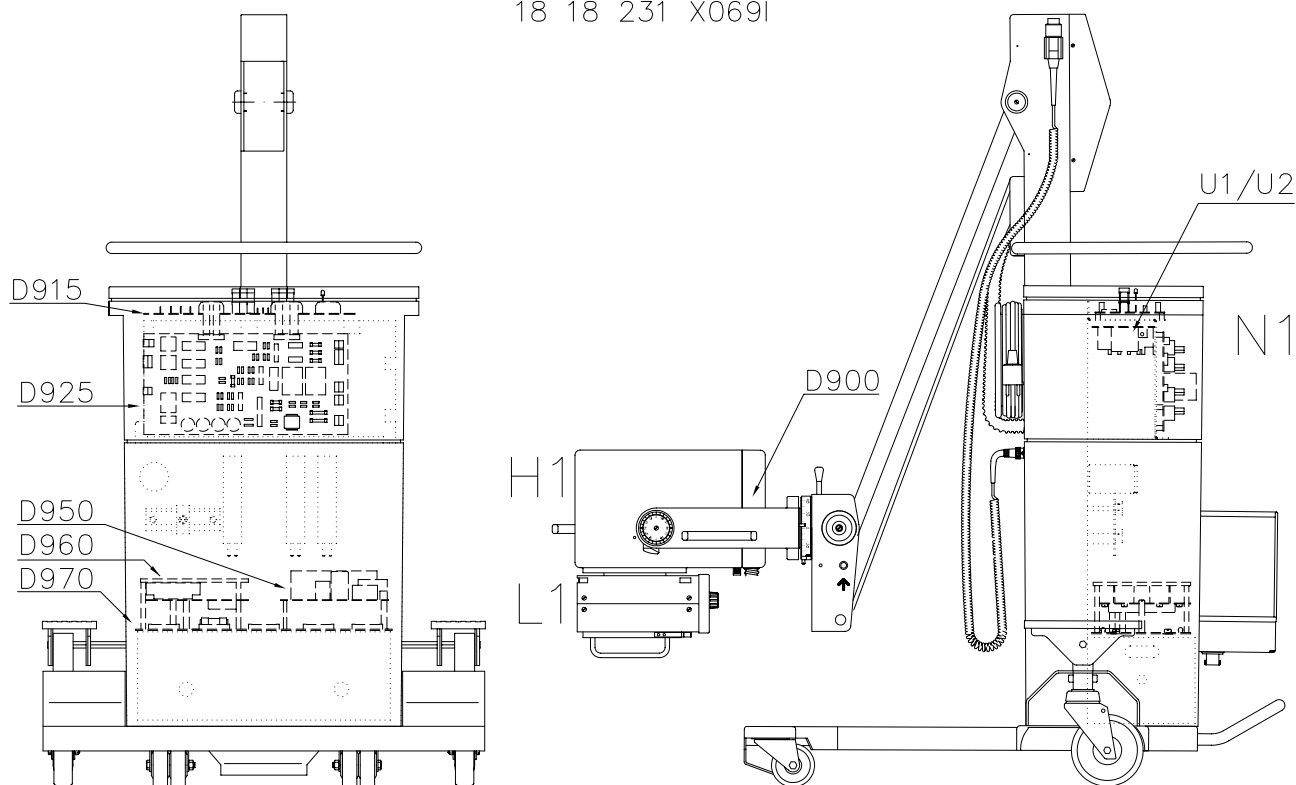


BAUGRUPPEN UND PLATINENUEBERSICHT
ASSEMBLY GROUPS AND BOARDS
VUE D'ENSEMBLE BLOCS ET CARTES
UNIDADES DE MONTAJE Y CIRCUITOS


N1 56 04 884 X069I	STEURRAHMEN CONTROL FRAME CADRE COMMANDE UNIDAD CONTROL	D915 18 20 443 X069I	STEUERKREIS CONTROL BOARD CIRCUIT DE CONTROLE CIRCUITO DE CONTROL
		D925 18 20 435 X069I	LEISTUNG PLATINE POWER BOARD CIRCUIT DE PUISSANCE CIRCUITO DE POTENCIA
		D950 18 20 401 X069I	KONDENSATORBANK LADUNG CAPACITOR BANK CHANGER CONDESATEUR CHARGEUR CARGADOR DE CONDESADORES
		D960 18 20 344 X069I	KV UMGEKEHRT KV INVERTER ONDULATOR KV ONDULADOR KV
		D970 18 20 427 X069I	KONDENSATORBANK CONDENSATOR BANK BANK DE CONDENSATEUR BANCO DE CONDESADORES
H1 56 04 892 X069I	EINTANK SINGLE TANK MONOCUVE MONOBLOQUE	D900 03 95 004 X050I	ADAPTER ADAPTER ADAPTATEUR ADARTADOR
L1 18 13 190 G037I	BLLENDE COLLIMATOR DIAPHRAGME COLIMADOR		

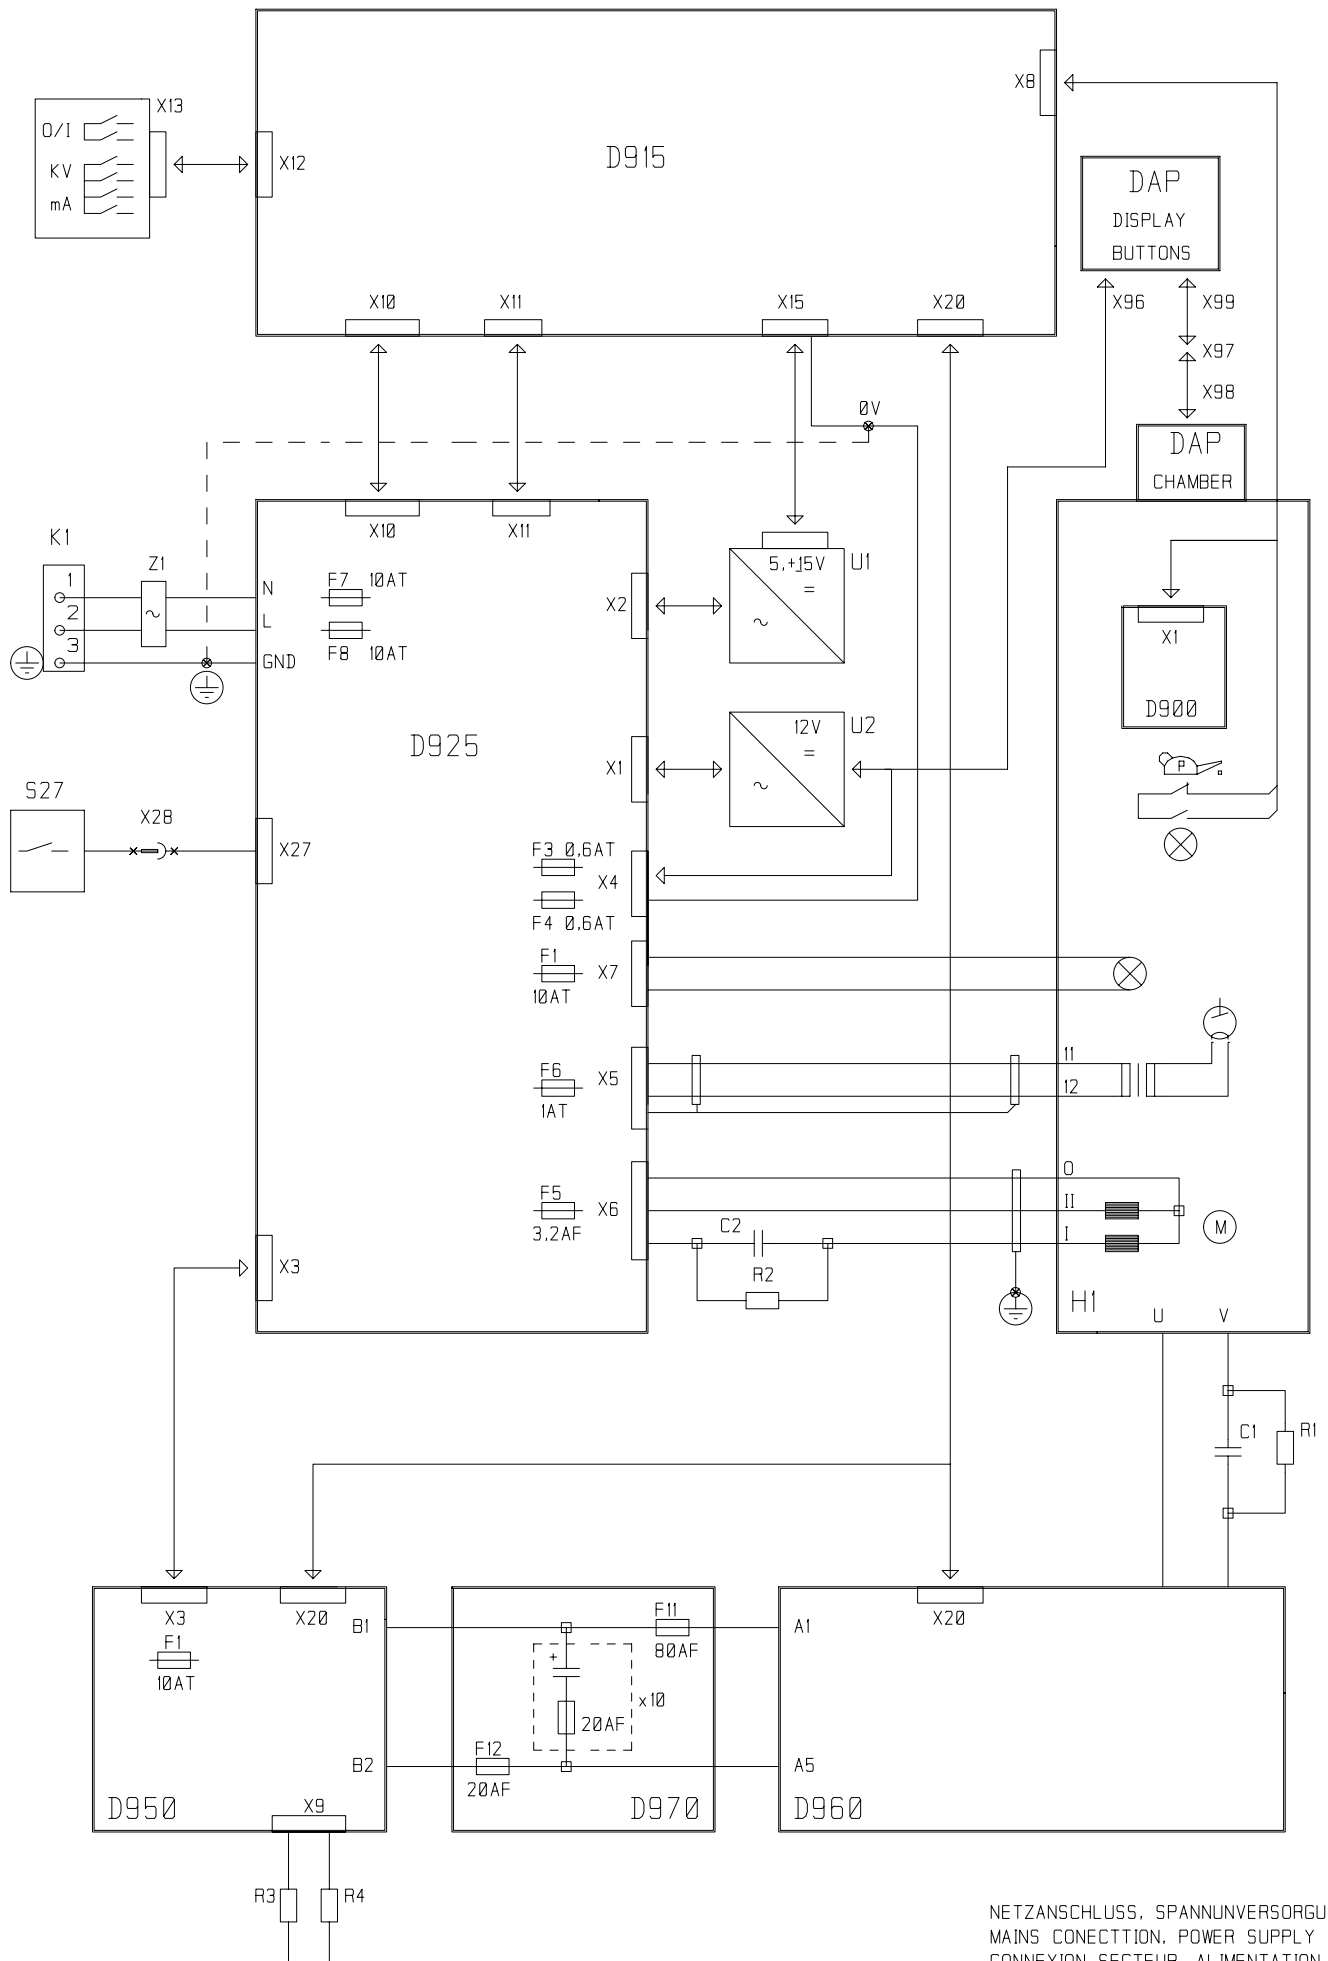

NETZANSCHLUSS, SPANNUNVERSORGUNG
 MAINS CONNECTION, POWER SUPPLY
 CONNEXION SECTEUR, ALIMENTATION
 CONEXIONADO GENERAL

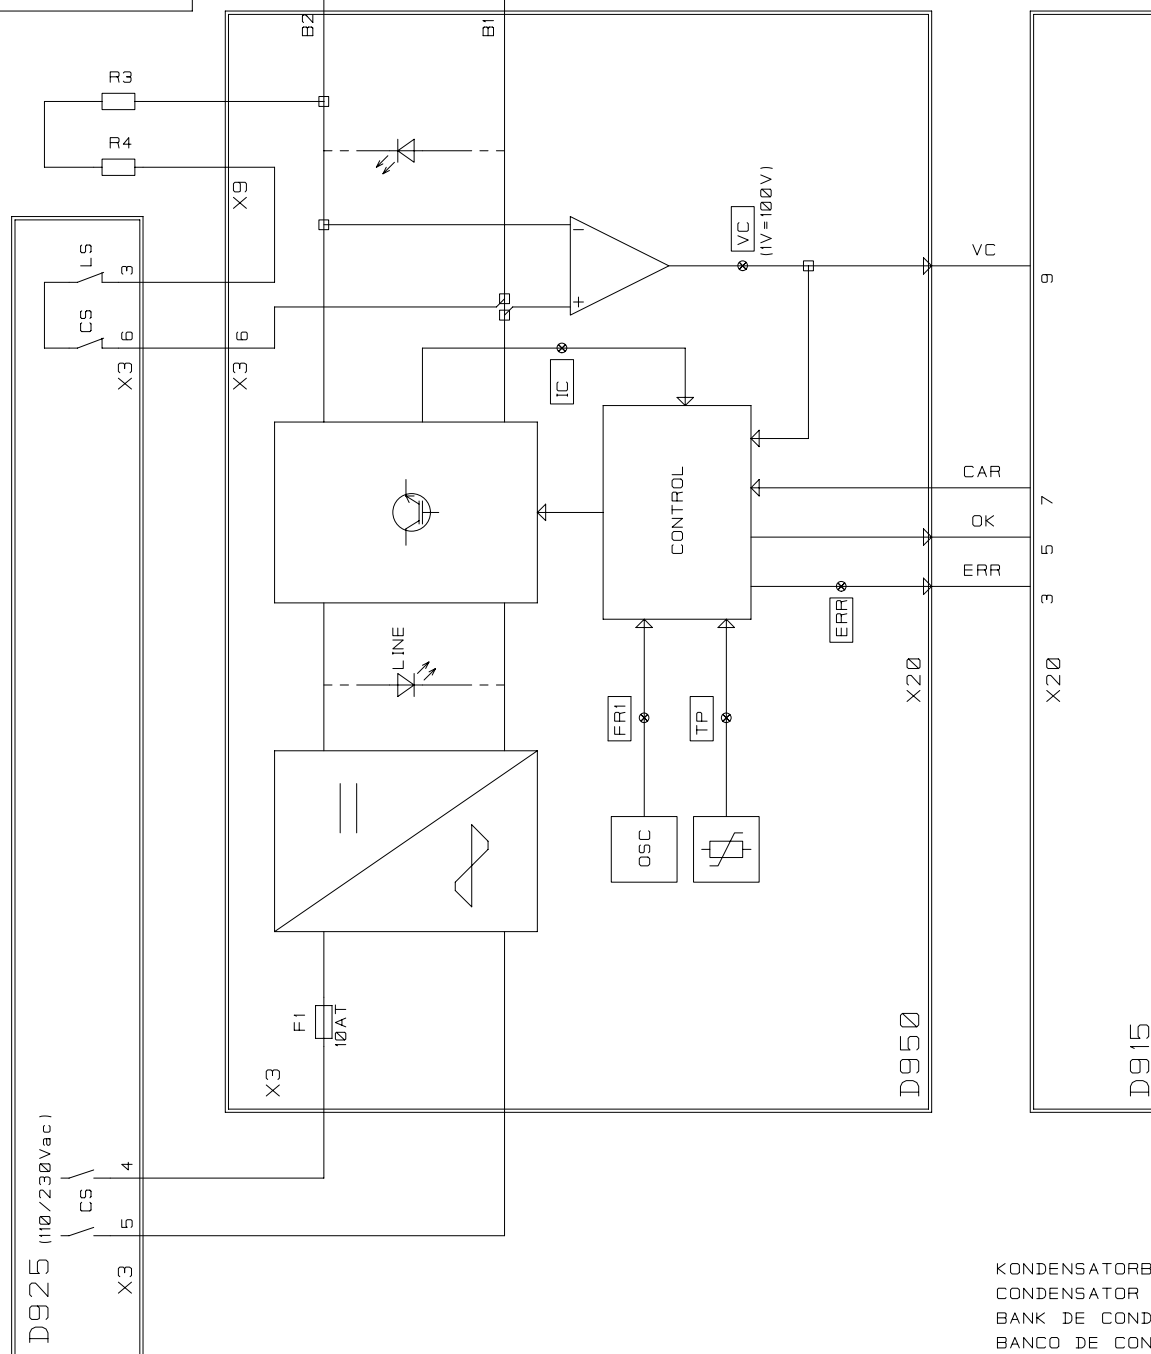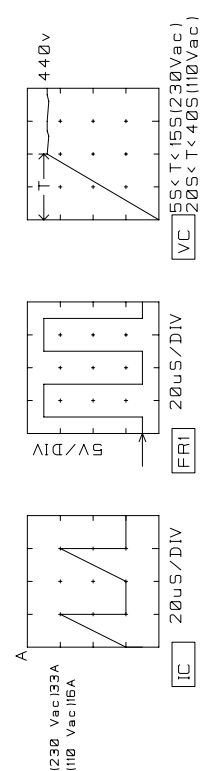


KONDENSATORBANK
CONDENSATOR BANK
BANK DE CONDENSATEUR
BANCO DE CONDESADORES

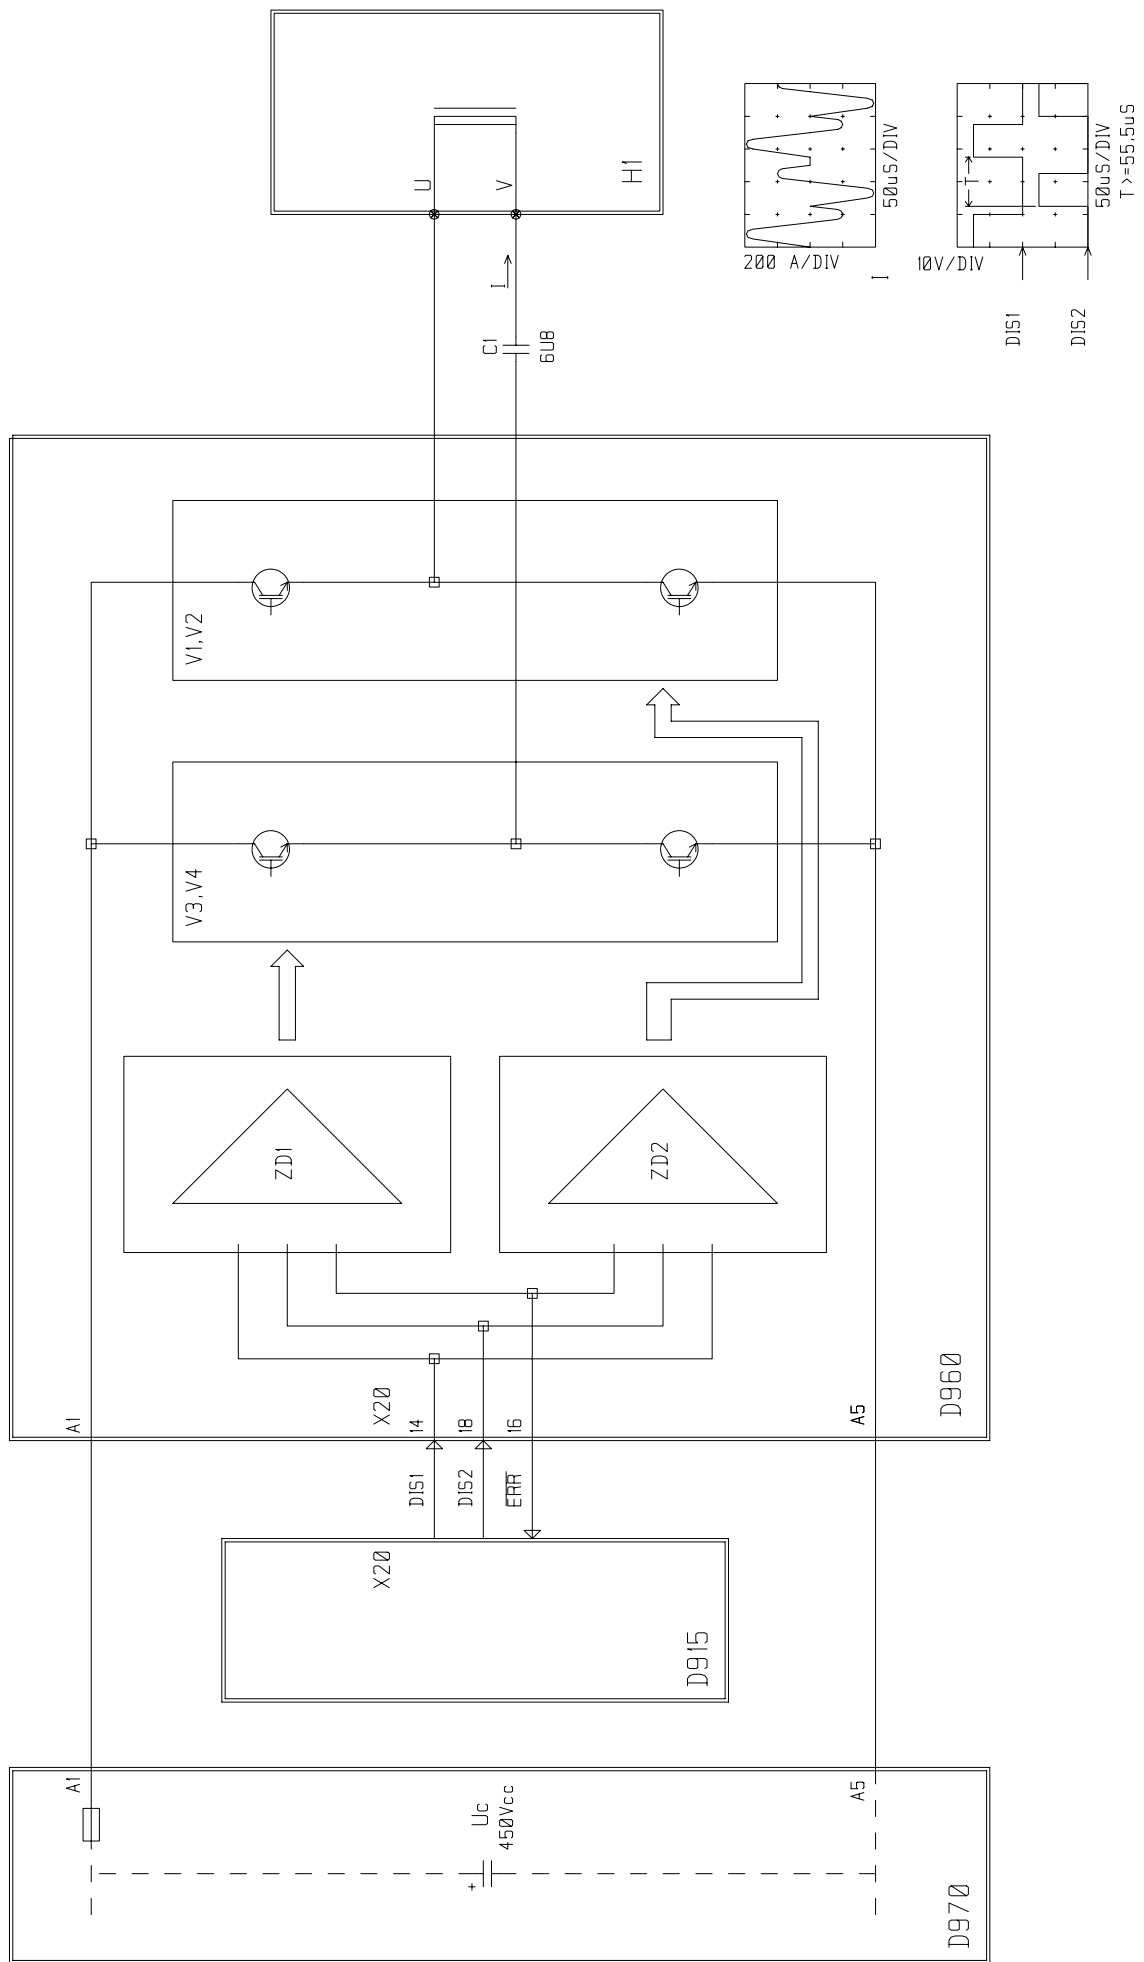






WECHSELRICHTER
INVERTER
CONVERTISEUR
ONDULADOR

EINTANK
SINGLE-TANK
MONOCUVE
MONOBLOQUE


X069I-6-1

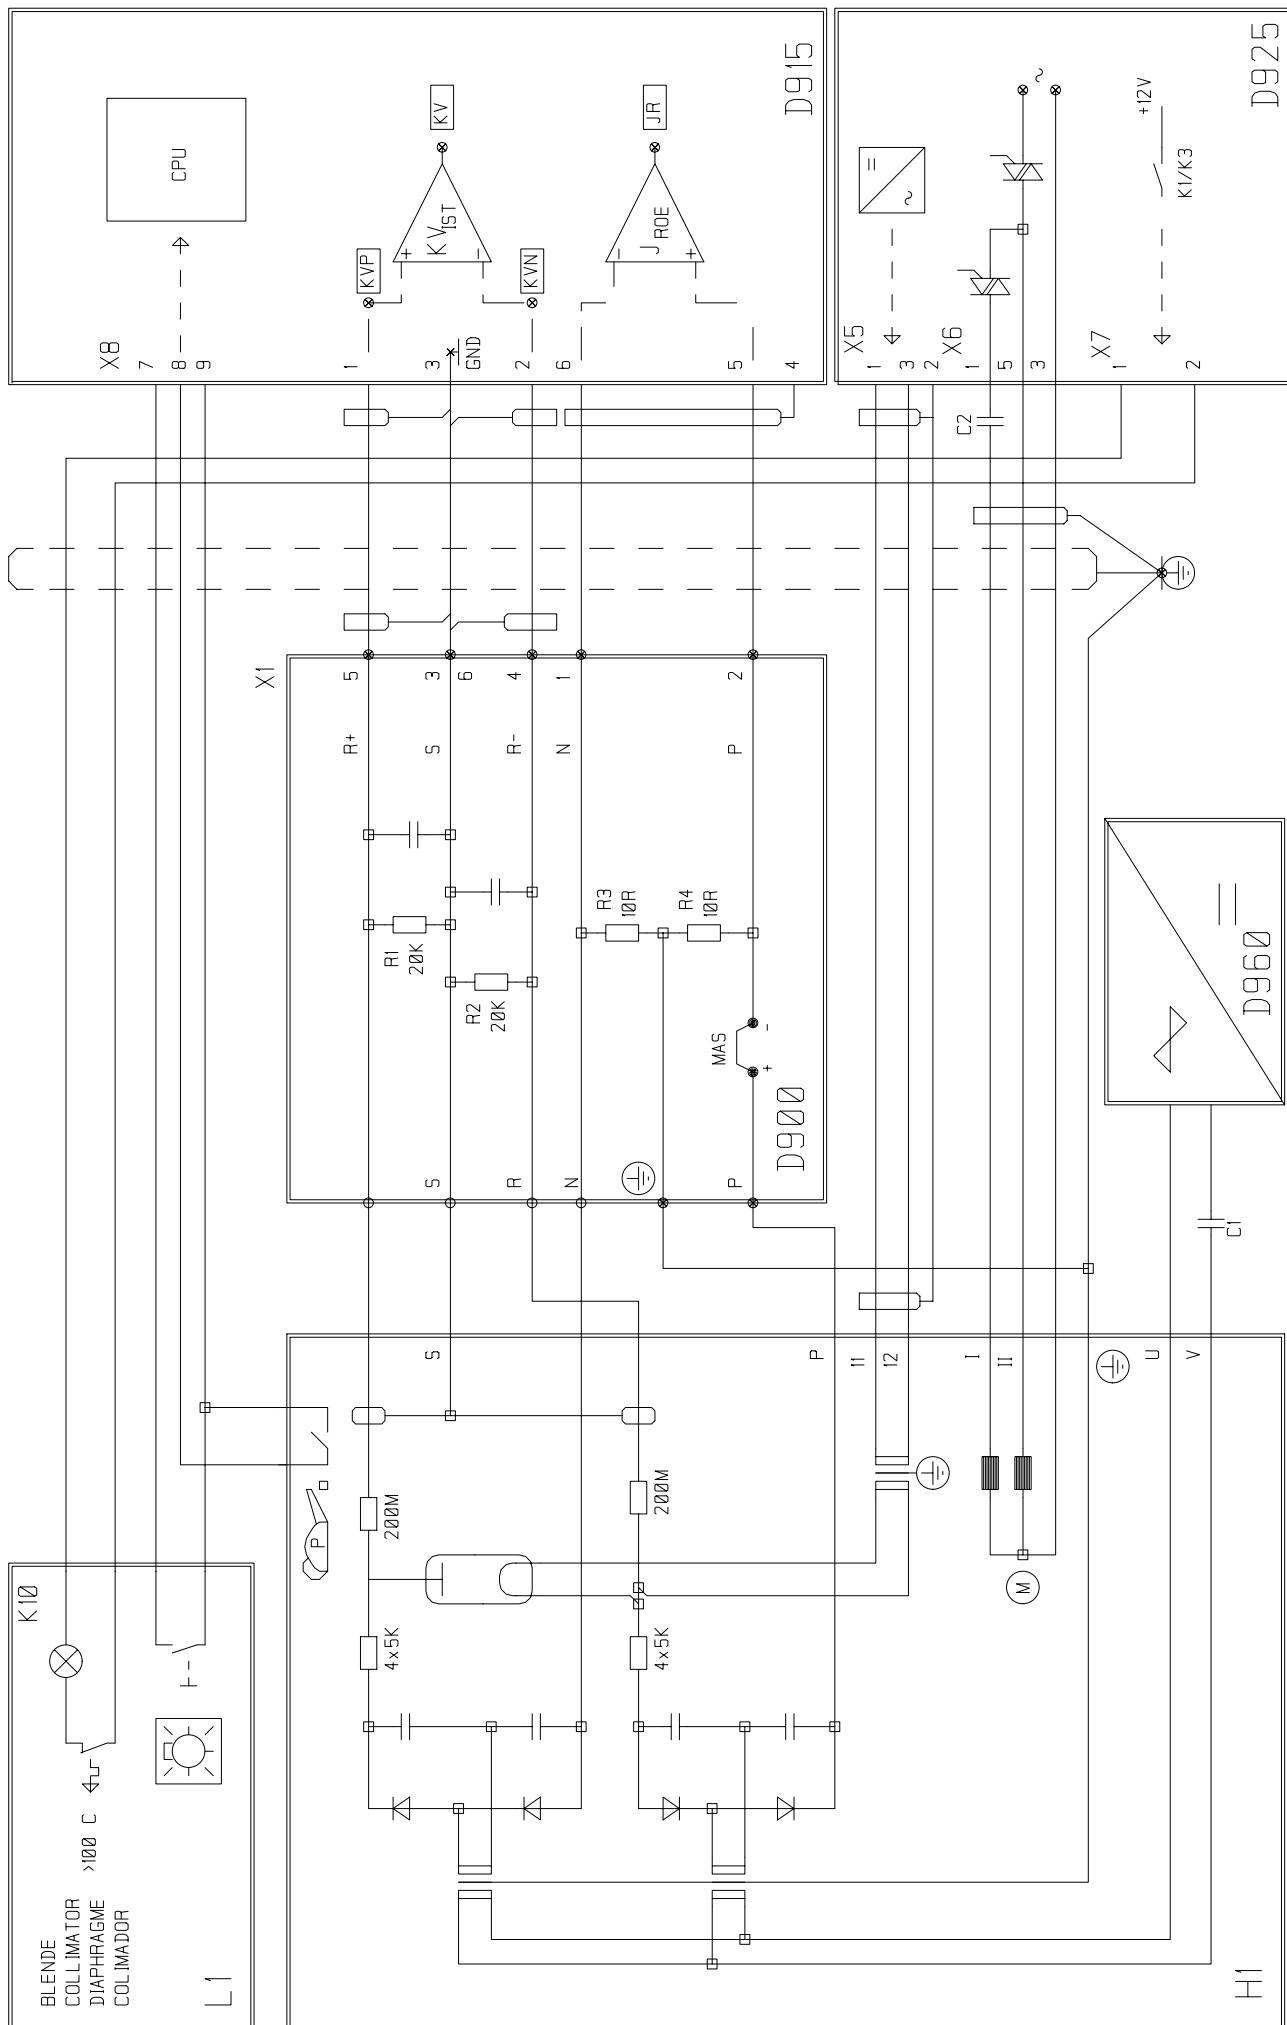

HI

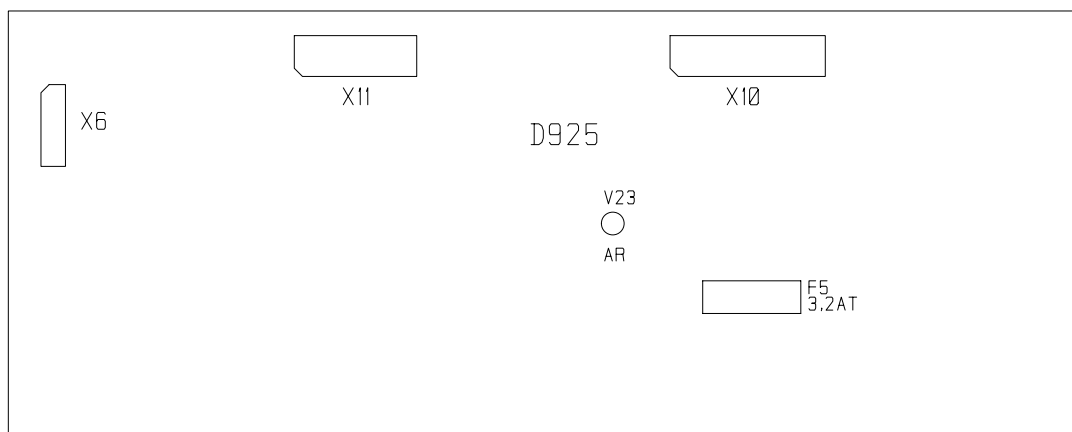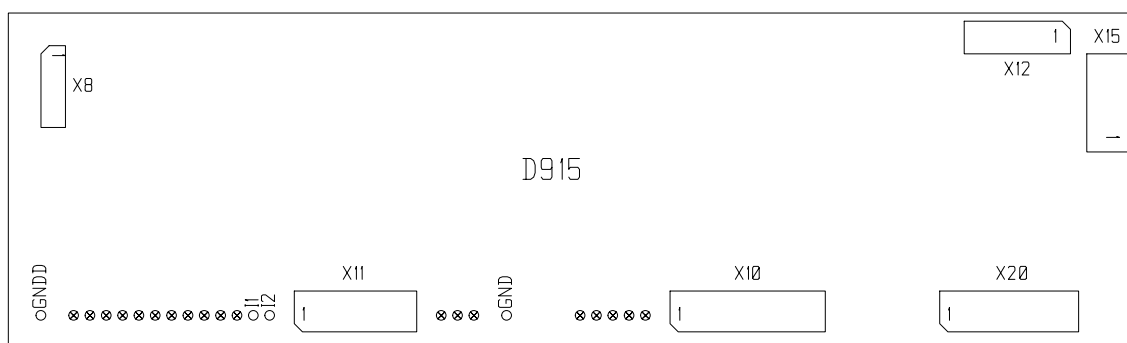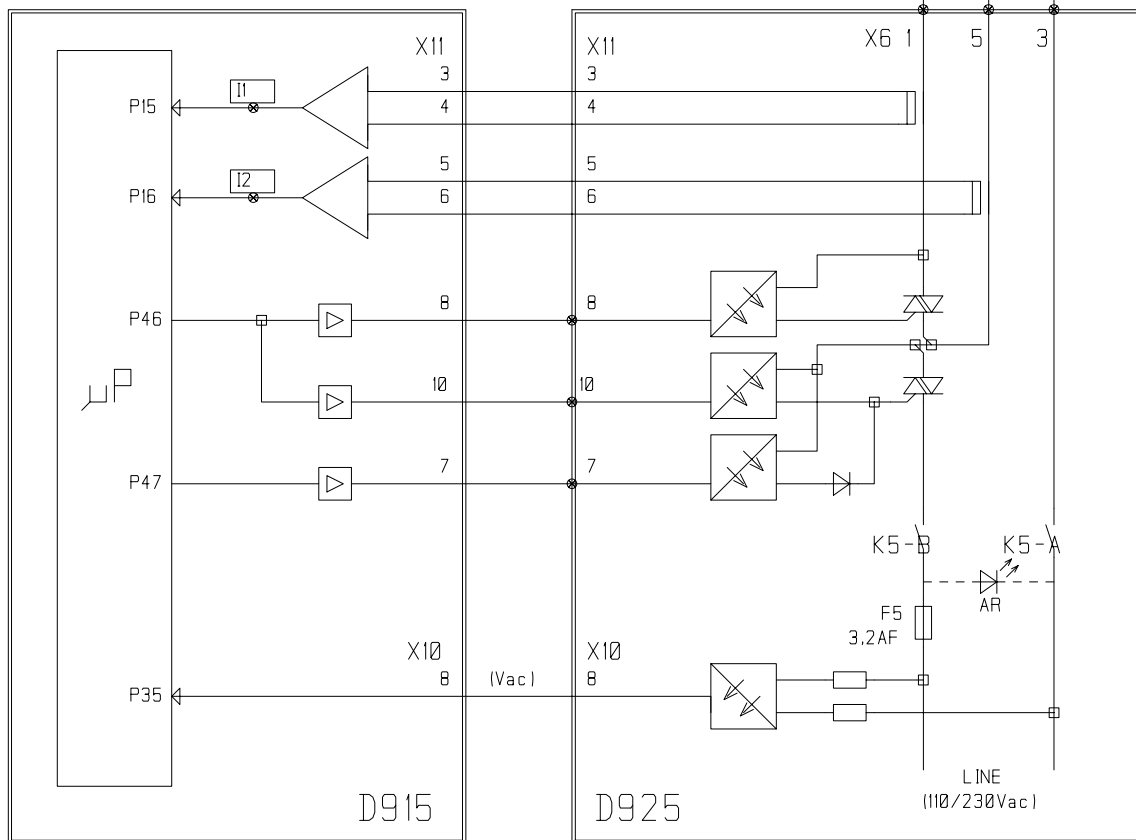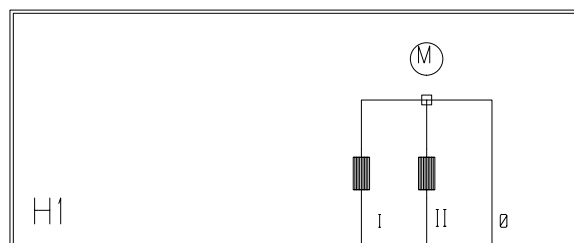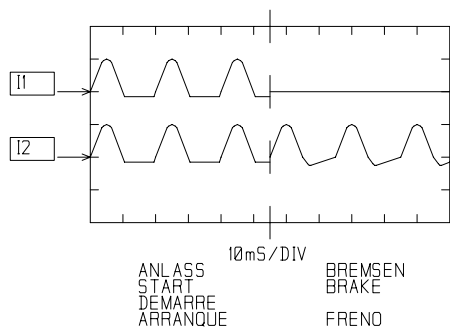

ANLASSGERAET
STARTER
DEMARREUR
ARRANQUE

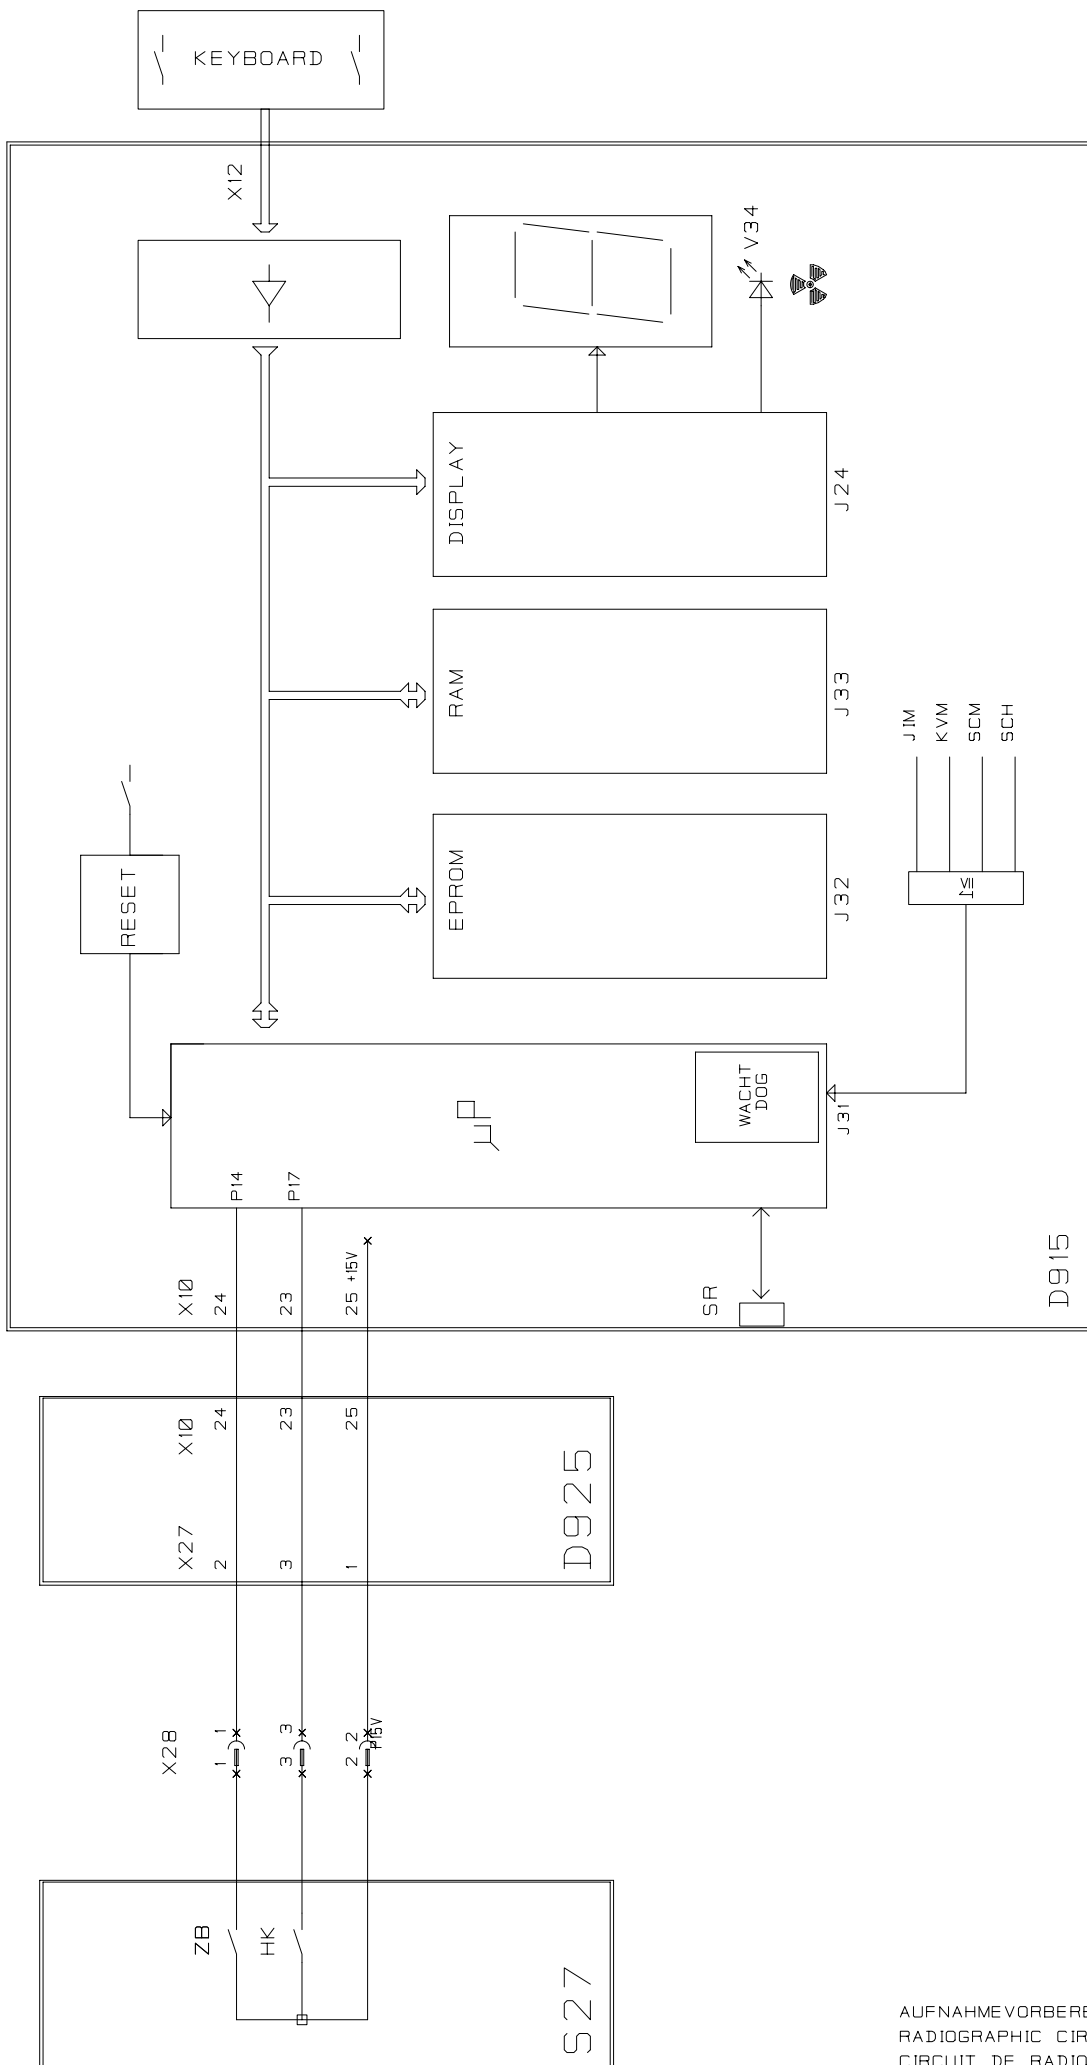

AUFNAHMEVORBEREITUNG KREIS
 RADIOGRAPHIC CIRCUIT
 CIRCUIT DE RADIOGRAPHIE
 CIRCUITO RADIOGRAFICO

POLYMOBIL PLUS

Schaltungsunterlage, circuit diagram
 schema des connexions, esquema-electrico } X0691

X = Liefereinsatz, beginning of delivery, debut de la livraison, comienzo del suministro

O = Nachträglicher Einbau möglich, subsequent installation possible, montage ultérieur possible, puede instalarse ulteriormente

Kompatibilitätsliste
Compatibility list
Liste de copatibilitè
Lista de compatibilidades

X0691-100-4